


Entineering FM Playground

User Manual

v1.4

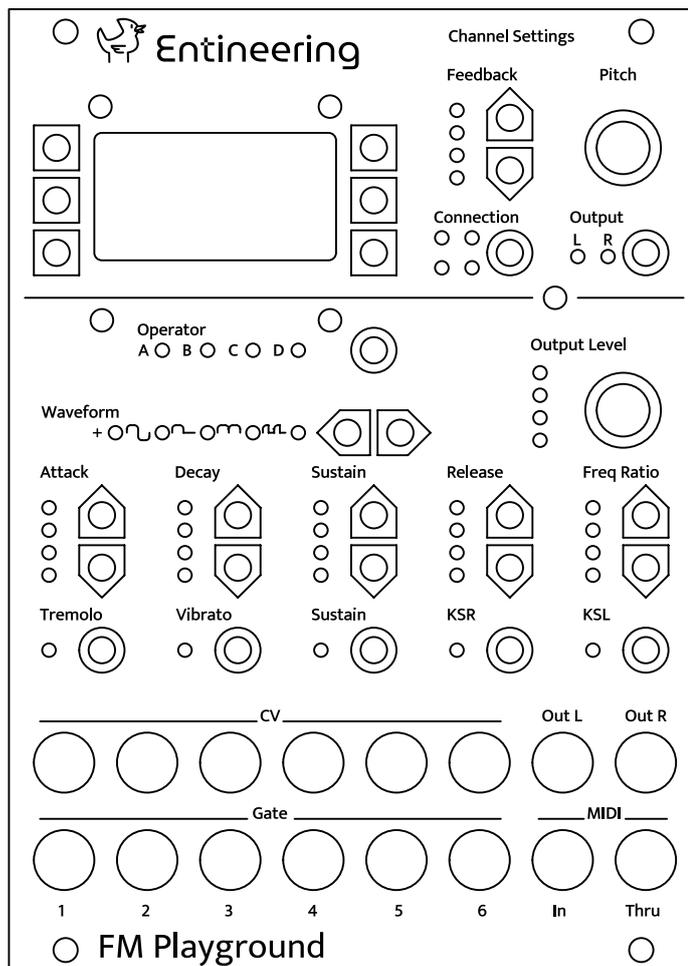

Introduction

Enteeneering FM Playground is a module for Eurorack synthesizers. It is a complete synthesizer doing a faithful emulation of the OPL3 chip, which was famously used in SoundBlaster and AdLib sound cards for the PC.

- 18 independent channels, 36 operators.
- Six channels can be configured to use four operators each, otherwise two operators per channel
- 6 CV inputs
- 6 gate inputs
- Two audio outputs
- MIDI In and Thru
- All channel and operator parameters accessible from the front panel
- Parameters are assignable to either gate or CV inputs
- Parameters are assignable to MIDI CC, Velocity and Aftertouch messages
- 99 program slots
- Polyphonic mode

Connecting the Module

Connecting Power

Your Eurorack synthesizer module comes equipped with a 10-pin keyed connector for power supply.

To connect the module:

1. **Power Off Your System:** Before connecting the module, ensure that your Eurorack case and power supply are turned off.
2. **Locate the Power Connection on Your Case:** Identify the power headers on your Eurorack case. These headers will have a 16-pin connector.
3. **Use the supplied ribbon cable to connect the module to your Eurorack power supply.** The red mark on the ribbon cable identifies the -12V supply line. On the module, the red mark points towards the bottom on the module.
4. **Secure the Module:** Once connected, mount your module into the case using the appropriate screws, ensuring it is securely in place.

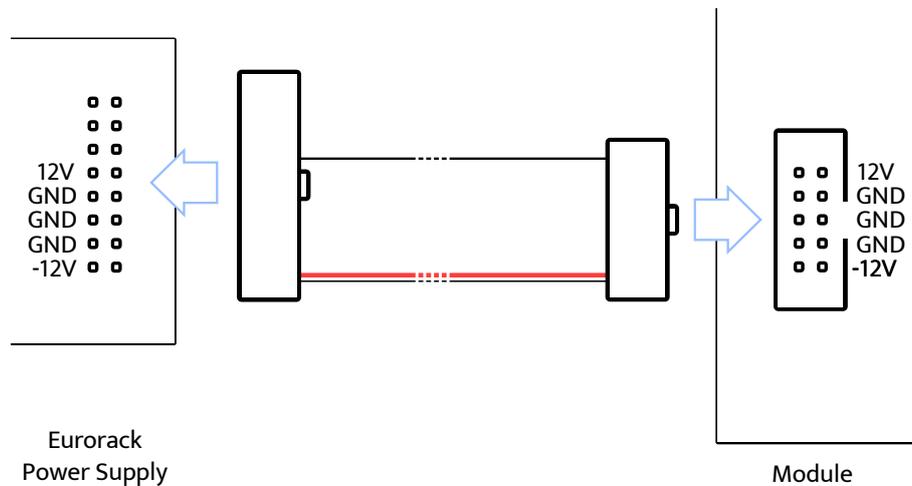


Figure 1: Connecting Power



Only use proper Eurorack power supplies with voltages of -12V and +12V.

Connecting MIDI

To connect a device with a 5-pin DIN connector to the module, you need a MIDI DIN-to-TRS adapter. The TRS jacks on the module use the A pinout that is now included in the official MIDI standard.

To be able to send MIDI data to the module, connect the MIDI Out or MIDI Thru port of your MIDI keyboard, audio interface or similar, to the MIDI In jack of the module.

Introduction to the Emulated OPL3 Chip

The heart of the FM Playground module, and the original OPL3 chip, lies in its unique approach to sound generation: FM (Frequency Modulation) synthesis. This is orchestrated through a combination of operators and channels, which work together to create its distinctive sound palette. Understanding how these operators and channels function is key to mastering the FM Playground module.

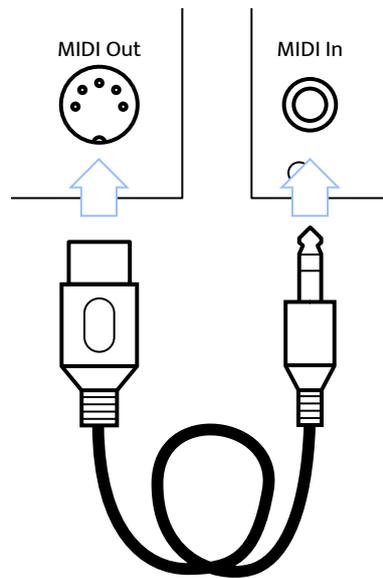


Figure 2: Connecting MIDI

Operators: The Building Blocks

1. **Definition:** In FM synthesis, an operator is essentially a sine wave generator. Each operator in the OPL3 chip can act as either a carrier (producing audible sound) or a modulator (modifying the frequency of another operator).
2. **Characteristics:** Operators in the OPL3 have several parameters:
 - **Waveform:** In addition to a normal sine wave, three (in OPL2 mode) or seven (in OPL3 mode) additional waveforms are available, most of which are variations of the sine pattern.
 - **Frequency:** Determines the pitch of the sound. This is derived from the channel frequency and a factor of 0.5 or 1 to 15.
 - **Amplitude:** Controls the loudness.
 - **Envelope:** Shapes the sound over time, with parameters like attack, decay, sustain, and release.
 - **Additional parameters:** Vibrato, tremolo, etc.
3. **Modulation:** By modulating one operator with another, complex timbres and textures can be created, ranging from simple bell-like tones to intricate evolving sounds.

Channels: The Organizational Framework

The emulated OPL3 chip features multiple channels, each capable of handling multiple operators. In the FM Playground module, this structure is preserved, allowing for intricate patching possibilities.

Properties of a Channel

- **Operator Capacity:** Each channel can control two or four operators. The latter requires enabling the OPL3 mode.
- **Feedback Control:** Channels have a feedback mechanism, where the output of a carrier operator can be routed back into its modulator, affecting the timbre and harmonic content.
- **Modulation Routing:** Channels allow for different modulation routings, including series (FM chain), parallel, and mixed modes.
- **Stereo Output Assignment:** Channels can be assigned to left, right, or both stereo outputs, enabling spatial sound placement.
- **Frequency Control:** Each channel has independent frequency control for its operators, determining the pitch of the sound.
- **Note On:** This signal engages the envelope generators of all operators in the channel.

Practical Applications

- **Recreating Classic Sounds:** Use the 2-operator mode for classic FM sounds reminiscent of early PC games and synthesizers.
- **Complex Sound Design:** Leverage the 4-operator mode for creating intricate and evolving textures.
- **Percussive Elements:** (Not present in the current firmware version.) Utilize the rhythmic mode to add unique percussive sounds to your modular setup.

In summary, the operators and channels of the emulated OPL3 chip form the basis of its sound generation capabilities. By understanding and experimenting with these elements, users of the FM Playground module can explore a vast range of sonic possibilities, from retro-inspired tones to innovative soundscapes.

Module Description

Buttons

The functions of the FM Playground module are controlled through push buttons on the front. These serve different functions: - **Soft Buttons:** Marked by a rectangle around them. These are located left and right of the screen and have different functions depending on screen contents. - **Up/Down Buttons:** Marked by an arrow around them. These control parameters with up to 16 steps. An LED bar graph next to them shows the current value of the parameter - **Toggle/Cycle Buttons:** Marked by a circle around them. These toggle parameters (On/Off) or cycle through up to four options. LEDs next to the button indicate the current value of the parameter.

Rotary Encoders

There are two high-precision rotary encoders on the module. One of the knobs also has a push function.

OLED Screen

The screen is used to display selected programs and channels, parameter values, as well as a menu system. The functions of the user interface can be triggered with the soft buttons described earlier.

Using the Module

The inputs on the front panel of the module are divided in two sections: Channel parameters and operator parameters. The channel controls influence the parameters of the currently selected channel (in monophonic mode) or all channels (in polyphonic mode).

The operator controls let you change the parameters of the currently selected operator. The operator can be selected at the top of the operator control section. In a two-operator channel, only operators A and B can be selected. In a four-operator channel, operators A through D can be selected.

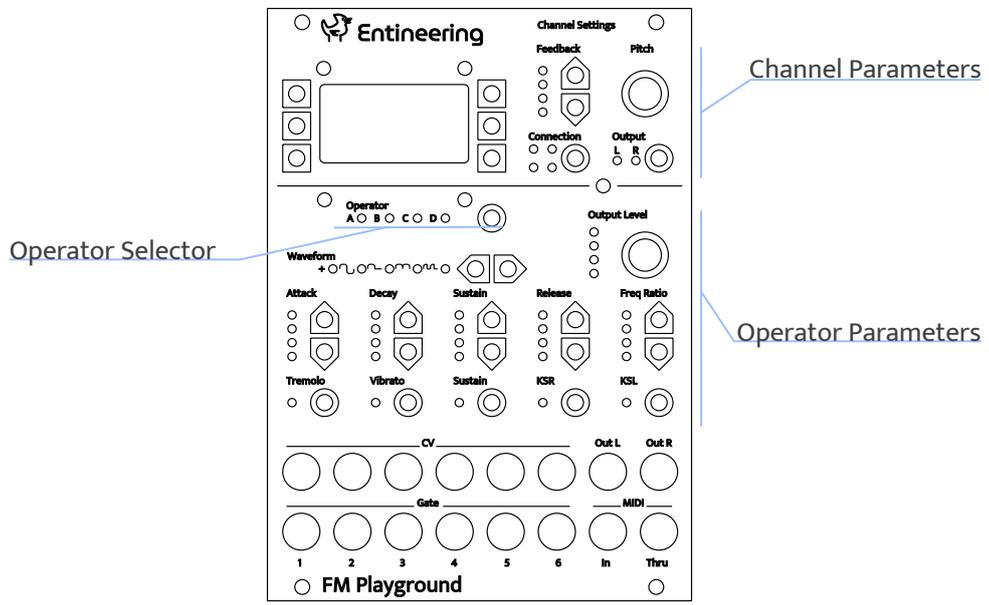


Figure 3: Front Panel Description

Channel Parameters

Feedback

One of the distinctive features of a channel in the OPL3 architecture is the feedback mechanism. Feedback occurs when the output of a carrier operator is routed back into its modulator. This can significantly alter the sound, adding complexity and harmonic content. In the OPL3-Euro Module, feedback is adjustable, offering a range from subtle coloration to aggressive, almost distorted tones.

- **Low Feedback:** Subtle changes in timbre, adding slight richness or “body” to the sound.
- **High Feedback:** More pronounced effects, creating metallic or bell-like tones, and can lead to aggressive, distorted textures at extreme settings.

Operator Connections

Also known as “Algorithm”. Controls the connections between modulators and carriers.

- **2-Operator Channels:** The simplest form, and the only one available in OPL2 mode.
 - Series: One operator acts as the modulator, shaping the timbre of the other operator, which acts as the carrier.
 - Parallel: Both operators act as carriers, and their outputs are mixed.
- **4-Operator Channels:** Only available in OPL3 mode. More complex, allowing for a variety of configurations:
 - Series: Operators are arranged in a chain, with each modulating the next.
 - Parallel: Operators work in pairs, each pair modulating a separate carrier.
 - Hybrid: A combination of series and parallel configurations, allowing for intricate sound designs.

You can change between two and four operators for a channel in the “OPL Settings” menu item.

Pitch

This controls the base frequency of the channel. This can be helpful if you don’t want to control the pitch externally (for example for percussive instruments) or to quickly

test a patch.

Pushing the knob triggers the “Note On” signal for this channel, making the channel audible.

Output Channels

In OPL3 mode, this lets you select the output channel. Options are left, right, both or off. In polyphonic mode, You can select between all voices on both channels (mono) and half of the voices left and half of the voices right (stereo).

In OPL2 mode, this button has no effect. You can switch between OPL2 and OPL3 modes in the “OPL Settings” menu item.

Operator Parameters

Waveform

In OPL2 mode, four waveforms are available: Sine, half-sine, abs-sine and pulse-sine. In OPL3 mode, four additional waveforms are available: Sine in even periods only, abs-sine in even periods only, square and derived square.

Output Level

This controls the output amplitude of the operator. Changing the output level of a modulator changes the modulation depth, while changing the output level of a carrier changes the output volume.

Attack

This parameter controls the rate at which an operator’s sound reaches its maximum level after a key is pressed. A faster attack results in the sound starting more abruptly, while a slower attack means the sound ramps up more gradually, creating a softer onset.

Decay

Decay controls the time taken for the sound to transition from the attack's peak level to the sustain level. A quicker decay results in a rapid reduction to the sustain level, whereas a slower decay allows for a more gradual descent.

Sustain

The sustain level sets the volume at which the sound remains after the initial decay phase and before the key is released. A high sustain level means the sound maintains a louder volume during sustain, while a lower level results in a quieter sustain phase.

Release

Release determines how quickly the sound fades to silence after the key is released. A short release time will stop the sound abruptly, whereas a longer release time allows the sound to decay slowly, creating a lingering effect.

Frequency Ratio

The frequency factor or ratio is used to set the frequency of an operator relative to the base frequency of the channel. These factors are crucial in defining the harmonic content and timbral characteristics of the sound produced.

The frequency ratio can be half, one, or any integer between two and 15.

Factor	Meaning
0.5	One octave below (Perfect Octave Down)
1	Unison (Same Pitch)
2	One octave above (Perfect Octave Up)
3	One octave plus a perfect fifth above
4	Two octaves above
5	Two octaves plus a major third above
6	Two octaves plus a perfect fifth above

Factor	Meaning
7	Two octaves plus a minor seventh above
8	Three octaves above
9	Three octaves plus a major second above
10	Three octaves plus a major third above
11	Three octaves plus a major third plus a microtonal amount above
12	Three octaves plus a perfect fifth above
13	Three octaves plus a perfect fifth plus a microtonal amount above
14	Three octaves plus a major seventh above
15	Three octaves plus a major seventh plus a microtonal amount above

Tremolo

Located on the last row of buttons on the far left. The tremolo effect modulates the amplitude of the sound at a regular rate, creating a pulsating effect. Tremolo depth can be adjusted in two steps in the chip settings.

Vibrato

Vibrato is the modulation of pitch at a steady rate. Vibrato depth can be adjusted in two steps in the chip settings. Higher vibrato settings will cause more noticeable pitch fluctuations, adding a quivering effect to the sound.

Sustain Enable

KSR (Key Scale Rate)

This parameter affects how the attack, decay, and release times of an operator are modified based on the pitch of the note being played. Enabling KSR results in shorter envelope times for higher-pitched notes, mimicking the behavior of many acoustic instruments.

KSL (Key Scale Level)

KSL adjusts the overall output level of an operator based on the pitch of the note. This helps to balance the loudness across different pitches, as higher notes can be perceived as louder. Lowering the KSL value makes the sound more consistent across the keyboard, while higher values accentuate the level differences between high and low notes.

KSL can be chosen between none, 1.5 dB, 3.0 dB and 6.0 dB per octave.

Saving and Loading Programs

All parameters of all channels and operators are retained during module power-off. Additionally, sets of parameters can be saved as “programs” and recalled later. 99 program slots are available.

Saving a Program

If parameters have been modified compared to the currently loaded program, the “Save” button appears in the upper right corner of the screen. Press the upper right soft button. Now use the center-right and bottom-right soft buttons to choose a program slot. Press “Save” to complete the operation or “Cancel” to exit and not modify any program slots.



When saving a program into a slot, the program previously in this slot is overwritten and cannot be recovered.

Factory programs can be recovered using the “Restore” item under the “Program” menu, or by doing a factory reset.

Loading a Program

While on the main screen, pressing the center-right or bottom-right soft buttons loads the next or previous program into the current channel, respectively. When in polyphonic mode, the program is loaded into all voices.

Loading a program can also be done using MIDI PC (Program Change) commands. In monophonic mode, PC commands on MIDI channels 1 to 16 load programs into OPL

channels 1 to 16 respectively. Channels 17 and 18 cannot be controlled via MIDI. In polyphonic mode, the MIDI channel to listen on can be configured in the menu.



Loading a program will discard any changes made to the parameters of the current channel and overwrite them with the contents of the program.

Program Load Fail

If, after loading a program, the program slot number is striked through, it means that the program could not be loaded. The reason is one or multiple of the following:

- The program uses a waveform only available in OPL3 mode, but OPL3 mode is currently disabled.
- The program uses four operators, but OPL3 mode is currently disabled.
- The program uses four operators, but the current channel is only configured for two operators, or vice versa. This does not happen in polyphonic mode, since the channels are automatically switched between two and four operators on program load.

Controlling Parameters Externally

Almost every parameter for channels and operators can be controlled externally via CV/Gate inputs or via MIDI.

CV inputs have a range of -7 to 7 volts. This range can be freely mapped to the available range of the parameter and even be inverted.

Whenever you change a parameter from the front panel, the display shows the current value of that parameter along with buttons to assign this parameter to CV, Gate or MIDI.

Assigning to a Gate Input

Parameters that only have an on/off state can be assigned to a gate input. After pressing the “Gate Assign” soft button, a screen appears where you can select the gate input to be used.



Figure 4: Parameter assignment buttons. Press “MIDI Assign” to assign this parameter to a MIDI message. Press “CV Assign” to assign the parameter to a CV input. Some parameters can be assigned to a gate input instead.

If you have configured gate and CV inputs to be used for polyphonic voices, those inputs are not available to be assigned to a parameter anymore. Use the menu to configure the number of inputs to be used for polyphonic voices.

Assigning to a CV Input

Parameters that can take a range of values can be assigned to CV inputs. Additionally to the input number 1 to 6, you can now also configure how input voltages should be mapped to parameter values. By default, 0 Volts refer to 0% of the parameter value and 5 Volts to 100%. Use the soft buttons to adjust these voltages. Press the soft button marked with a right arrow to complete the assignment.

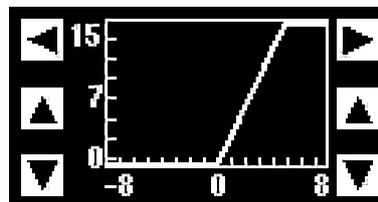


Figure 5: CV value mapping. Horizontal axis shows the input voltage, vertical axis shows parameter value. Up/down buttons in the left control lower input voltage, up/down buttons on the right control upper input voltage. Right arrow button confirms, left arrow button returns to main screen.

Assigning to a MIDI Value

Parameters can also be assigned to different MIDI messages. The messages that can be used are:

- Velocity

- Controller (e.g. mod wheel)
- Channel Aftertouch
- Polyphonic Aftertouch



Figure 6: MIDI message assignment. Press one of the message types, or “Cancel” to return to the main screen.

Value ranges can be mapped in the same way as with CV inputs, but with MIDI input values 0 to 127 instead of voltages.

In monophonic mode, OPL channels 1 to 16 are controlled with MIDI channels 1 to 16. OPL channels 17 and 18 cannot be controlled via MIDI. In polyphonic mode, the MIDI channel can be configured in the settings menu.

Main Menu

From the main channel/program screen, pressing the upper left button labeled “Menu” opens the main menu. Pressing the upper left button again exits out of the menu. Left center and left bottom buttons let you select the previous or the next menu item respectively. The meaning of the buttons on the right depend on the selected menu item.

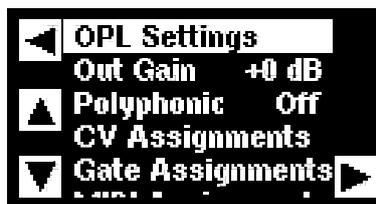


Figure 7: Main menu.

OPL Settings

These are global settings for the emulated OPL3 chip. Please note that programs saved with a certain set of settings may be unable to load with a different set of

settings. For example, if saving a program with four operators, it cannot be loaded if the chip is in OPL2 mode or the selected channel is not configured to have four operators.

Tremolo

This sets the tremolo depth for all operators on all channels where tremolo is enabled. Set it to either 1.0 dB or 4.8 dB.

Vibrato

This sets the vibrato depth for all operators on all channels where vibrato is enabled. You can choose either 7 cents or 14 cents.

OPL3 Mode

Switch between OPL2 and OPL3 mode here. OPL3 mode enables channels with four operators and additional waveforms.

4-Operator Channels 1 through 3 and 10 through 12

Enable four-operator mode for the respective channel. Note that channels 4, 5, 6 and 13, 14, 15 can't be used if four-operator mode is enabled on channels 1, 2, 3 and 10, 11, 12 respectively, since their operators become part of the primary channel.

With polyphonic mode enabled there is only one setting that controls all channels used for polyphony at once.

Output Gain

The output levels of the emulated OPL chip may seem too low in some circumstances. In these cases, you can increase the output level with this setting. If you experience clipping, lower the setting instead.

Since firmware version 1.3, the output gain can be adjusted in 1 dB steps.

This is initialized to +6 dB to help new users who start exploring FM Playground with a single channel. Once you start using multiple channels or the polyphonic mode, lower this to 0 dB.

Polyphonic Mode

When turned off, all channels of the emulated OPL chip are handled separately. They all can have different parameters, and channels 1 to 16 can be controlled with MIDI channels 1 to 16.

However, when polyphonic mode is turned on, only one set of parameters is applied to six channels simultaneously. The six voices are controlled via a single MIDI channel (configured below) and/or a number of CV/Gate inputs (also configured below).

CV Assignments

This lists all parameters currently assigned to one of the CV inputs. It also allows for deleting one or all CV assignments.

Gate Assignments

This lists all parameters currently assigned to one of the gate inputs. It also allows for deleting one or all gate assignments.

MIDI Assignments

This lists all MIDI assignments. It also allows for deleting one or all MIDI assignments.

Programs

Different operations on stored user programs can be performed in this submenu.



Figure 8: Programs menu.

This menu was added in firmware version 1.3.

SysEx Export

With this, all 99 programs can be transferred via MIDI to a host PC running the appropriate software for recording SysEx messages. One example on macOS is SysEx Librarian. It is also possible to transfer programs to another FM Playground module.

SysEx Import

Here you can import previously exported programs via MIDI SysEx. Optionally, a range of programs to import can be specified. Programs outside of that range will be ignored during the import process.



Figure 9: Program SysEx import menu.

After selecting “Import”, the module waits for MIDI SysEx messages containing program data. It will wait for all programs in the specified range, unless you press “Cancel”.



Programs within the specified range will be overwritten with the imported programs!

Copy

Here, a program can be copied to a different slot. Choose the source and destination program slot, then select “Copy”.



The program selected by “Destination” will be overwritten!

Swap

Here, two programs can be swapped between slots.

Restore

Here you can restore a subset of programs to their factory default. Only the programs between “First” and “Last” will be restored once you select the “Restore” item.



Programs within the specified range will be overwritten with the factory programs!

Advanced

Advanced settings and functions can be found here.



Figure 10: Advanced menu.

Polyphonic CV Channels

Sets the number of CV/Gate inputs which are used as Volts/Octave and Gate inputs in polyphonic mode. Between zero and six inputs can be dedicated for pitch and “note on” this way. The other inputs can be assigned to any of the other parameters.

Polyphonic MIDI Channel

With polyphonic mode turned off, MIDI channels 1 to 16 control OPL channels 1 to 16. With polyphonic mode turned on however, a single MIDI channel controls six of the OPL channels. The MIDI channel number can be configured here.

CV Pitch Quantise

Controls whether CV inputs should be quantised to semitones when assigned to channel pitch, or when used for polyphonic mode. When enabled, only semitones

can be played, with no ability to do pitch bends or microtonal pitches. When disabled, any control voltage is converted to a frequency, allowing for pitch bends and microtonal pitches. Please note that the CV inputs need to be calibrated more precisely to be able to play exact pitches. See below for calibration procedures.

MIDI Pitch Bend Range

This controls the number of semitones the pitch is bent when actuating the pitch bend wheel on a master keyboard. It can be set between zero (pitch bend disabled) and 12 semitones (one octave of pitch bend in either direction). The default is 2.

CV Calibration

Your FM Playground module is calibrated from the factory. However, if you find that Volts/Oct tracking is not precise enough, you can calibrate the CV inputs.

After selecting the menu item, you are requested to do three calibration steps per input:

1. Calibrate zero. Unplug any cable from the CV input being calibrated and press the button with the round symbol. Press the right arrow button to proceed to the next step.
2. Calibrate positive voltage. Feed a precise, known positive voltage into the CV input. Around 5 Volts works best. Now press and hold the up and down buttons until the displayed voltage matches the one being fed into the module. Press the right arrow button to proceed to the next step.
3. Calibrate negative voltage. Feed a known negative voltage into the input. Around -5 Volts works best. Press and hold the up and down buttons until the displayed voltage matches the voltage being fed into the module. Press the right arrow to calibrate the next CV input.

After completing these steps for every CV input, you are asked to either save or discard the new calibration.

Firmware Info

Displays the version of the currently installed firmware. Visit <https://entineering.eu> to see if there is a newer version available for your module.



Figure 11: CV calibration screen. Press the round button to calibrate the zero point. Press the right arrow to proceed to the next step. Press the left arrow button to return to the previous step.

Firmware Update

Use this option to update the firmware on your module. See the chapter on updating the firmware for details.

Factory Reset

This restores the settings and programs to their default state. Optionally you can also clear the CV calibration, although this is not recommended.



Resetting the calibration does **not** restore the calibration done at the factory. Instead, it sets the calibration to generic default values. A calibration is probably needed after this.

Updating the Firmware

The firmware of the module can be updated by sending a firmware update file via MIDI SysEx messages. Please find firmware update files at <https://entineering.eu>. For installing the update, you first have to enter firmware update mode, and then send then new firmware via MIDI from a host PC.

Entering Update Mode

To enter update mode, while on the main screen, press the top left soft button to enter the menu. Using the center left and bottom left soft buttons, navigate to the “Advanced” submenu and press the bottom right soft button to enter this submenu. In the same manner, select the “Firmware Update” menu item.

Transfer New Firmware

Connect a MIDI cable from a PC-MIDI interface to the module. Now send the firmware file in .syx format from your PC to the module. You can disable any delays between messages for faster transfer.



Make sure that no other software or device is sending MIDI data to the module while updating.



Some low-cost USB-to-MIDI adapters do not properly support SysEx messages, in particular those based on the CH345 chip.

Table 2: Recommendations for Software that can be used for sending SysEx files.

Operating System	Software	Where to Get
macOS	SysEx Librarian	https://www.snoize.com/sysexlibrarian/
Linux Command Line	<code>amidi</code>	<code>alsa-utils</code> package
Windows	MIDI SysEx Transfer Utility	https://apps.microsoft.com/detail/9pfd4ddwgktn

SysEx Librarian

Follow these steps to transmit a new firmware file to the module using SysEx Librarian:

- Add the firmware file to the list of SysEx files in SysEx Librarian.
- Select your MIDI interface in the drop-down menu at the top.
- To speed up the transfer, go to “Settings” under the “SysEx Librarian” menu and set the pause between messages to 0 milliseconds.
- Press the “Play” button in the top left.
- Wait until the file was fully transferred.

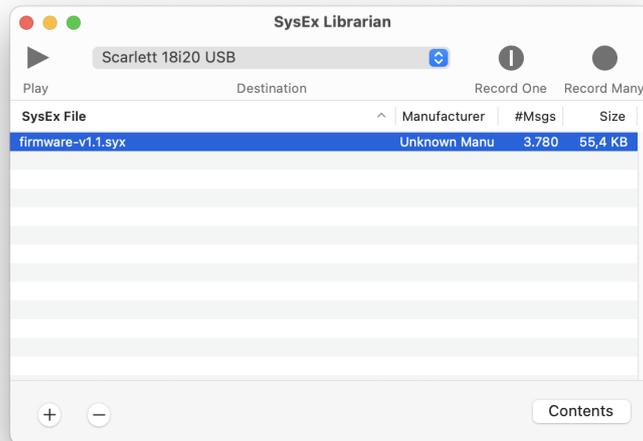


Figure 12: SysEx Librarian

amidi

Follow these step to transmit a new firmware file to the module using `amidi` on Linux:

- Open a terminal.
- Type `amidi --list-devices` to get a list of your MIDI devices. Note the descriptor in the “Device” column.
- Type `amidi --send=/path/to/firmware-v1.1.syx --port=hw:1,0,0`, where the argument to `--send` is the path to the firmware file, and `--port` is the MIDI device descriptor from the previous step.
- Wait until the file was fully transferred.

MIDI SysEx Transfer Utility

Follow these step to transmit a new firmware file to the module using MIDI SysEx Transfer Utility on Windows:

- Select your MIDI interface in the drop-down menu labelled “MIDI Output Port”.
- Press the button “Pick SysEx File to Send” and choose the downloaded firmware file.
- In the field “Transfer Delay”, enter 0.
- Press “Validate and Send SysEx”

- Wait until the file was fully transferred.

Complete the Update

After the new firmware file has been transferred completely, you are prompted with a message asking you if the firmware should be written to module. Choose “yes” to complete the installation.



Ensure a stable power supply during this last phase of the update! If power gets interrupted while the firmware file is written to the module, the module will no longer be operational. Additional tools and knowledge are required to recover from this state.

Appendix A: Attributions

The firmware of FM Playground uses several open source libraries which are listed here, along with their licenses.

Nuked-OPL3

FM Playground uses the Nuked-OPL3 software library, copyright by Nuke.YKT, licensed under the terms of the GNU Lesser General Public License version 2.1. Please visit <http://entineering.eu> to get a special firmware package that allows you to replace the Nuked-OPL3 source code.



This firmware package is for advanced users only and requires additional software and hardware tools to install. Installing custom firmware can potentially damage the FM Playground module. Damages caused by custom firmware is not covered by warranty.

GNU LESSER GENERAL PUBLIC LICENSE
Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA
Everyone is permitted to copy and distribute verbatim copies

of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them

with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General

Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of

this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy,

and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of

this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy

from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a

work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest

possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the library's name and a brief idea of what it does.>  
Copyright (C) <year> <name of author>
```

```
This library is free software; you can redistribute it and/or  
modify it under the terms of the GNU Lesser General Public  
License as published by the Free Software Foundation; either  
version 2.1 of the License, or (at your option) any later version.
```

```
This library is distributed in the hope that it will be useful,  
but WITHOUT ANY WARRANTY; without even the implied warranty of  
MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU  
Lesser General Public License for more details.
```

```
You should have received a copy of the GNU Lesser General Public  
License along with this library; if not, write to the Free Software  
Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301  
USA
```

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the  
library `Frob' (a library for tweaking knobs) written by James Random  
Hacker.
```

<signature of Ty Coon>, 1 April 1990

Ty Coon, President of Vice

That's all there is to it!

u8g2

This product uses the u8g2 software library, copyright by Oli Kraus, licensed under the following terms:

Universal 8bit Graphics Library (<https://github.com/olikraus/u8g2>)

Copyright (c) 2016, olikraus@gmail.com

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

minlzma

This product uses the minlzma software library, copyright by Alex Ionescu, licensed under the following terms:

MIT License

Copyright (c) 2020 Alex Ionescu

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.